


DEVELOPED FOR

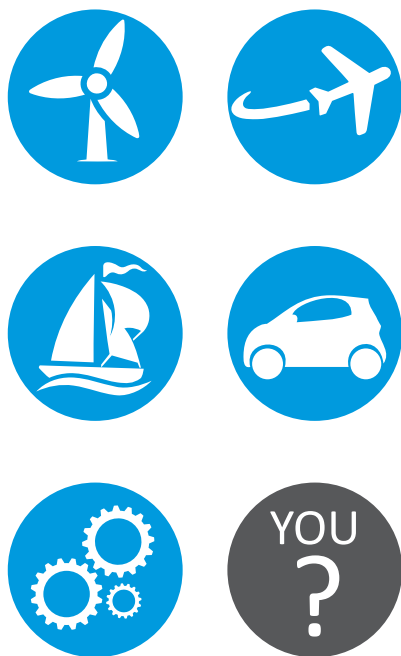

CONTACT US

T +49 (0)5451 50447-0
info@dd-compound.com

SERVICES

- technical know how in using the MTI[®] process
- seminars concerning vacuum infusion (beginners and advanced)
- consulting in vacuum infusion processes (technical and economical)
- fault analysis
- conversion of production to vacuum infusion
- mold construction
- prototyping
- single piece production/ limited lot production



DD|COMPOUND

Lengericher Straße 8
49479 Ibbenbüren
Germany

fon: +49 (0)5451 50447-0
fax: +49 (0)5451 50447-10
info@dd-compound.com
www.dd-compound.com

by DD|COMPOUND

VACUUM INFUSION AT ITS BEST



DD|COMPOUND

EFFECTIVE. ECONOMICALLY.

The MTI® hose can be utilized for any process spiral tubes or any other media for evacuation has been applied so far.



INTEROPERABLE

MTI valve
by DD|COMPOUND

SQUEEZER
by DD|COMPOUND

SQUEEZEE
by DD|COMPOUND



ADVANTAGES

- less effort for preparing the infusion process
- no resin trap necessary
- few investment cost
- visible infusion process
- minimize of resin consumption
- resin allocation independent from evacuation hose
- small molding lips
- reduction of Dry Spots
- complete impregnation of the fabric
- more process stability for single piece production and small series
- minimize material consumption
- high fiber to volume ratio, adjustable through injected resin volume



Membran Tube Infusion

The MTI® hose consists of an evacuation hose, non-woven and an air permeable membran. The sandwich construction leads to optimize the evacuation process and quality. Thus the MTI® hose will minimize costs using the vacuum infusion process.

One step for manufacturing high quality products by vacuum infusion while minimize costs compared to other processes producing fiber parts.

The MTI® hose is placed around the mold lip like an annular piping. The barrier effect of the membran avoids that resin could enter the evacuation hose. When resin reaches the membran it will stop there and will flow through the dry rest of the fabric. Thus cost intense and complex calculations of resin injection points are redundant.

By using the MTI® hose the complete impregnation of the fabric is guaranteed. The resin allocation can be arranged independently from the MTI® hose, so it is possible to manufacture complex fiber parts by vacuum infusion. The MTI® hose can be located directly on the fiber part, e.g. at critical points or fields with material accumulation (thicker layers).

The risk of Dry Spots will be remarkably reduced.

The fiber to volume ratio can be exactly calculated, because no resin can discharge the mold. An additional advantage; the infusion process is visible and can be monitored at any time.

This process qualifies for small fiber parts and single piece production as well as for big fiber parts and serial production. The MTI® process reduces costs while increasing the quality. The MTI® process is suitable for conversion of production from hand lay up lamination to vacuum infusion, because for using the MTI® process no molding lips are necessary. The MTI® hose can be located directly at the edging of the fabric, thus conventional molds can still be used.